


User manual  
**CON050**  
for Jofra DTI050 Handheld Thermometer,  
CTC series and RTC/PTC Calibrator series

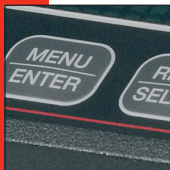

**User Manual**  
**CON050**  
**for JOFRA DTI050 Handheld Thermometer,**  
**CTC series and RTC/PTC Calibrator series.**

© Copyright 2012 AMETEK Denmark A/S



<b>LIST OF CONTENTS</b>	<b>Page</b>
<b>1. INTRODUCTION</b> .....	<b>5</b>
1.1 General information .....	6
1.2 Hardware requirements .....	7
1.2.1 PCs, minimum hardware requirements: .....	7
1.2.2 PCs, minimum software requirements: .....	7
1.3 Installing CON050 .....	7
1.3.1 DotNet Framework .....	8
1.3.2 RTC/PTC and CTC series USB drivers .....	8
1.4 Reinstalling CON050 .....	9
1.5 Connecting CON050 to a JOFRA device .....	9
1.6 Starting the CON050 program .....	10
1.6.1 WindowsXP/Vista/7/10® .....	10
1.7 Uninstalling CON050 .....	10
1.8 Program structure for CON050 .....	10
1.9 Probe configuration data files .....	11
<b>2. PROGRAM START UP</b> .....	<b>14</b>
2.1 Temperature unit .....	15
2.2 Connecting to the JOFRA device .....	15
2.3 TCP/IP protocol (RTC only) .....	16
2.3.1 No connection to JOFRA device .....	16
2.3.2 Successful connection to JOFRA device .....	17
2.4 Upload/download functions .....	18
Note! Up/Downloading probe data to device with RTC/PTC .....	20
<b>3. PROBE IDENTIFICATION DATA</b> .....	<b>21</b>
3.1.1 Manufacturer .....	22
3.1.2 Model number .....	22
3.1.3 Sensor serial number .....	23

- 3.1.4 Sensor type..... 23
- 4. PROBE TYPE DATA..... 24**
  - 4.1 Temperature range..... 25
  - 4.2 Electrical output..... 25
  - 4.3 Selection of the TC type ( TC type only ) ..... 26
  - 4.4 CJ compensation ( TC type only )..... 26
  - 4.5 Maximum excitation current (RTD & THERMISTOR only) .... 26
  - 4.6 Self heating constant (RTD & THERMISTOR only) ..... 26
  - 4.7 Rtd coefficients ( Rtd only )..... 27
- 5. PROBE CALIBRATION DATA ..... 28**
  - 5.1 Calibration details ..... 29
  - 5.2 Measurement location ID..... 30
  - 5.3 Probe response time ..... 30
  - 5.4 Probe excitation ( RTD & Thermistor only )..... 30
  - 5.5 Thermocouple coefficients..... 31
  - 5.6 RTD coefficients ..... 32
  - 5.7 Thermistor coefficients ..... 33

## 1. INTRODUCTION

---

This manual contains installation and operating instructions for:

JOFRA windows probe configuration software

**CON050**

The program was developed by:

**AMETEK Denmark A/S**

Gydevang 32-34  
DK-3450 Allerød  
Denmark

Tel.: +45 48 16 80 00

Fax: +45 48 16 80 80

## 1.1 General information

The CON050 program is designed to configure the JOFRA DTI050 handheld thermometer (RS–232 communications port), the RTC/PTC (USB & Ethernet) and the new CTC calibrators (USB port) with a range of AMETEK smart sensors.

The software is included in the JOFRACAL installation USB memory stick with update downloads available from the AMETEK home page.

Knowledge of the JOFRA equipment and system to be tested is essential in order to obtain the maximum benefit from this program. Knowledge of Windows<sup>®</sup> programs in general is an advantage.

- **Warranty**

Use of the product remains the full responsibility of the user, and AMETEK Denmark A/S offers no warranty and is under no obligation in relation to this product. In addition, AMETEK Denmark A/S cannot be held responsible for any damage, which may occur in connection with the use of this product, including loss of earnings, loss of profit, loss of data or recovery of lost data, loss of goodwill and other similar incidental or consequential damage or loss.

- **Technical assistance**

Please contact the distributor if you require technical assistance.

## 1.2 Hardware requirements

CON050 has the following requirements

### 1.2.1 PCs, minimum hardware requirements:

- Intel® Pentium® II 1.4 GHz processor.
- 128MB RAM (256MB recommended)
- 80MB free disk space on hard disk (120MB recommended) prior to installation
- Standard VGA (800x600, 256 colours). 1024x768 recommended.
- USB input device for installation of program
- Communication
  - RTC/PTC - 1 free USB or Ethernet connection.
  - CTC series - 1 free USB.
  - DTI050 - 1 free RS-232 serial port.

### 1.2.2 PCs, minimum software requirements:

- Microsoft Windows® XP(32bit), Vista(32bit), 7(32bit&64bit), 8 &10.
- System fonts: MS Sans Serif and Arial.

## 1.3 Installing CON050

Simply insert the Ametek JOFRACAL installation USB memory stick

1. Select the Software menu.





2. Select either the CON050 32 or 64bit version (depending on the computers processor) in the menu. Simply follow the installation instructions on screen.



Future upgrades available for download on [www.jofra.com](http://www.jofra.com).



By default, CON050 is installed in the directory:

***Default program folder\CON050 (32bit)***

***Root:\Ametek\CON050 (64bit)***

An icon will automatically appear on the Program's menu.

Be sure to select the correct OS version 32 or 64 bit.

### 1.3.1 DotNet Framework.

The CON050 software requires Microsoft .NET FRAMEWORK SP1 which is installed if not already found on the PC.

### 1.3.2 RTC/PTC and CTC series USB drivers

The RTC/PTC and CTC series calibrators required a driver to communicate with CON050. This driver is installed automatically during the installation of CON050

If you want to install the program manually, the USB also contains a CON050SETUP.EXE file.

- ☛ Note: when installing you may require Administrator's privileges. If not please contact your local System Administrator.

## 1.4 Reinstalling CON050

If you wish to reinstall, please use the Add/Remove programs option in the control panel of your PC, then reinstall. Your personal files will be maintained.

When upgrading the installation it is preferred that you uninstall the existing version prior to installing the new.

## 1.5 Connecting CON050 to a JOFRA device

CON050 can be connected to a JOFRA RTC/PTC or CTC calibrator using a USB cable or Ethernet using TCPIP protocol. A JOFRA DTI050 using a serial connection (RS232).

The device should be connected to a free USB or RS232 serial port on the PC - please refer to the PC manual for further information regarding the location and appearance of serial ports. Use the serial cable supplied with the device.



- The JOFRA device must be switched off when connecting the cable from the PC.
- The JOFRA device and the PC must be earthed to avoid noise interference and damage to the equipment.
- You are advised not to switch the calibrator on until CON050 has been started.

## 1.6 Starting the CON050 program

### 1.6.1 WindowsXP/Vista/7/10<sup>®</sup>

- Click *Start*.
- Select *Programs*.
- Select *CON050*.
- Select *CON050 configuration*

## 1.7 Uninstalling CON050


CON050 is removed from the PC as follows:

- Open Control Panel
- Open Add/Remove Programs
- Select CON050
- Press Add/Remove button and follow instructions on screens

All personal files (probe definition files) will be retained in the CON050 folder during the uninstall process. These can be used for subsequent installations of CON050.

## 1.8 Program structure for CON050

Like other Windows<sup>®</sup> programs, CON050 uses buttons, dialog boxes, lists etc. CON050 uses paging controls to navigate through the main areas of the program.

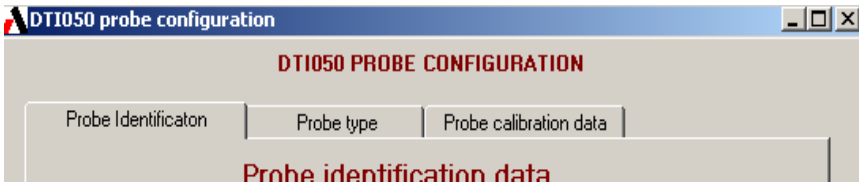

After initial Probe data is divided into 3 areas:

- Probe identification data ([Probe identification data](#))
- Probe identification data ([Probe type data](#))
- Probe calibration data ([Probe calibration data](#))

All of which are displayed in their own page.

## 1.9 Probe configuration data files

Under installation a number of Probe configuration template files are placed in the CON050 folder, containing all the default values for each of the know Ametek probe types. These can be loaded into CON050, edited and then saved again under the particular probes' serial number.

- DLC-ZERO
- DLC-155
- DLC-158
- DLC-159
- DLC-187
- DLC-250
- DLC-700
- STS-050 A 250
- STS-050 A 350
- STS-050 A 500
- STS-050 B 901


- STS-050 B 250
- STS-050 B 350
- STS-050 B 500
- STS-100 A 901
- STS-100 A 250
- STS-100 A 350
- STS-100 A 500
- STS-100 B 901
- STS-100 B 250
- STS-100 B 350
- STS-100 B 500
- STS-102 A 030
- STS-102 B 030
- STS-103 B 150
- STS-120 A 915
- STS-120 A 935
- STS-120 A 966
- STS-120 A 967
- STS-150 A 915
- STS-150 A 935
- STS-150 A 966
- STS-150 A 912
- STS-200 B 902
- STS-200 A 915
- STS-200 B 915
- STS-200 A 916
- STS-200 B 916
- STS-200 A 925
- STS-200 B 925
- STS-200 A 917
- STS-200 B 917

- STS-200 B 970
- STS-200 A 970
- STS-200 A 918
- STS-200 B 918
- STS-TC-N-A-1205

## 2. PROGRAM START UP

---

### Program menu – connecting to the device

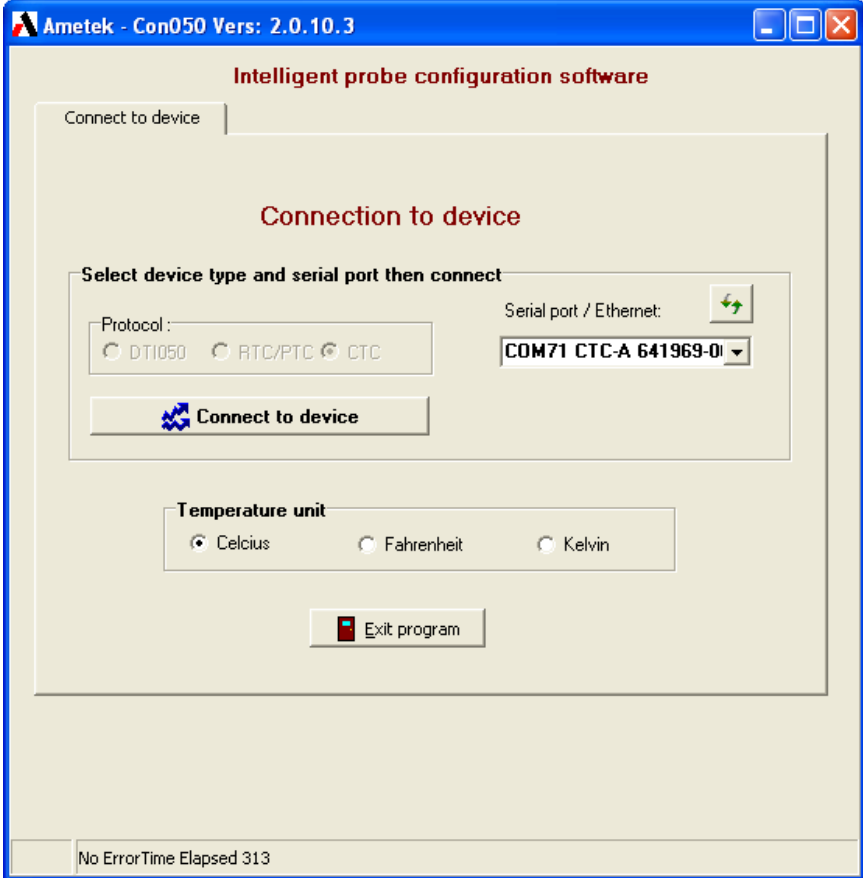

Select the device (DTI050, RTC/PTC or CTC series) then the serial port number. The serial port list contains the Ethernet (TCPIP) option plus the available ports on the PC.

## 2.1 Temperature unit

The preferred temperature unit can only be selected prior to opening communications.

### Select temperature unit

The image shows a dialog box titled "Temperature unit". It contains three radio buttons for selecting the temperature unit: "Celcius" (which is selected), "Fahrenheit", and "Kelvin".

## 2.2 Connecting to the JOFRA device

On start up the user must connect to the JOFRA device before probe configuration can begin.

### Selecting serial port and connect

The image shows a dialog box titled "Serial port / Ethernet:". A dropdown menu is open, displaying the following options: "Ethernet TCPIP", "COM1" (highlighted in blue), "COM3", "COM4", "COM5", "COM6", "COM71 CTC-A 641969-0000", and "COM82 RTC 353158-00003". Below the list, there is a radio button labeled "Kelvin".

To open communications simply select the Ethernet protocol (RTC only) or the serial port connecting the JOFRA device and click the "Connect to device".






Connect to device

## 2.3 TCP/IP protocol (RTC only)


If the Ethernet option is selected the IP address interface appears and the user can enter the IP address allocated to the connected RTC.

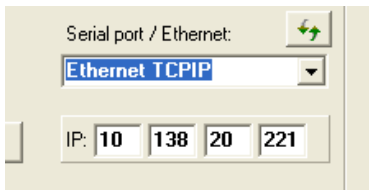

Note. Please refer to the **RTC user manual** regarding setting the IP address on the calibrator.



**Reload available comports list.**

If an RTC/PTC is connected and turned on but does not appear in the list, then select the refresh  button. This may be the case if you switched on the RTC/PTC after starting the program.

### 2.3.1 No connection to JOFRA device


If connection to the JOFRA device was unsuccessful the following message appears. Check that the device is on and the USB/RS232 cable is correctly connected.



### Communication error

## 2.3.2 Successful connection to JOFRA device

When connected to the JOFRA device, CON050 displays the Probe configuration pages and the functionality to down/Upload and saving configuration data to files.

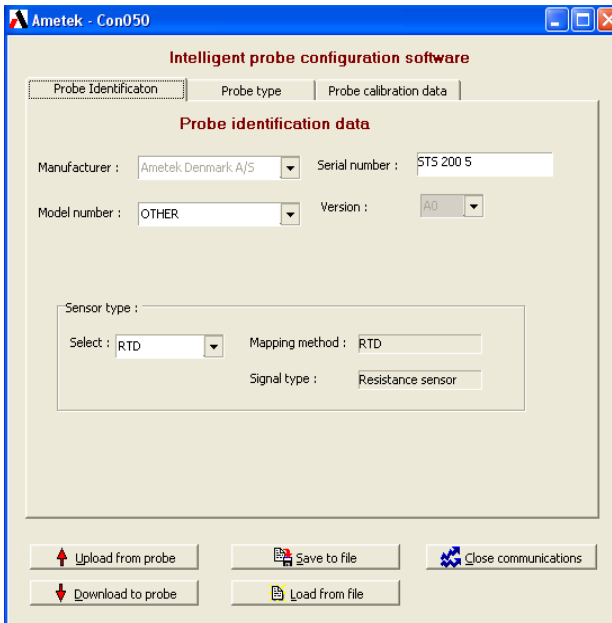


### CON050 after successful connection to JOFRA device

## 2.4 Upload/download functions

Several buttons appear at the bottom when communications are open allowing the user to store probe data in files and to send/retrieve data from the JOFRA device itself.
 
## The buttons have the following functions:




Upload probe data to device

Uploads the current probes data from the device into CON050.




Download probe data to device

 Download the probes data from CON050 to the device.



Save probe data to file

 
Save the current probe definition data to a file.



Retrieve probe data from file

Load probe definition data from a file.

 ☞ **Note!** Probe definition data files are saved under their serial number in the same folder as CON050.EXE



Close communications


Close down communications and return to start up screen.

**Note! Up/Downloading probe data to device with RTC/PTC.**

The RTC/PTC series have both Reference sensor and a Differential Load compensation (DLC) sensor and the actual sensor involved in the upload/download must be determined.


**RTC Calibrator.**

If working with an RTC you need to select the type of sensor.

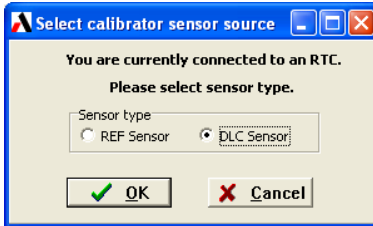

**PTC & CTC series Calibrator.**

The PTC series however only has the Reference sensor so the user simply selects the OK button.

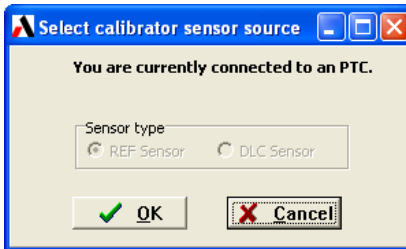

### 3. PROBE IDENTIFICATION DATA

---

Probe identification data page:

The screenshot shows a software window titled "Ametek - Con050" with a blue title bar. The main content area is titled "Intelligent probe configuration software" and contains a tabbed interface with three tabs: "Probe Identification" (selected), "Probe type", and "Probe calibration data". Below the tabs, the section "Probe identification data" is displayed. It includes the following fields:

- Manufacturer: Ametek Denmark A/S (dropdown menu)
- Serial number: STS 200 5 (text input)
- Model number: OTHER (dropdown menu)
- Version: A0 (dropdown menu)


Below these fields is a "Sensor type" section with a "Select" dropdown menu set to "RTD", a "Mapping method" text input set to "RTD", and a "Signal type" text input set to "Resistance sensor".

At the bottom of the window, there are five buttons: "Upload from probe" (with an upward arrow icon), "Download to probe" (with a downward arrow icon), "Save to file" (with a floppy disk icon), "Load from file" (with a floppy disk icon), and "Close communications" (with a network icon).

The probe identification page contains a description of the probes type, model and maker.

### 3.1.1 Manufacturer


Select the probe manufacturer from the drop down list of recognised companies.

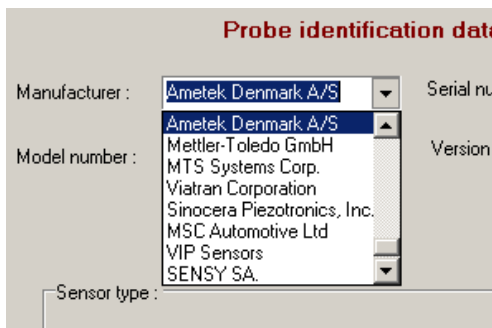

### 3.1.2 Model number

The sensor model number must be selected from the following drop down list.

#### Sensor model number selection

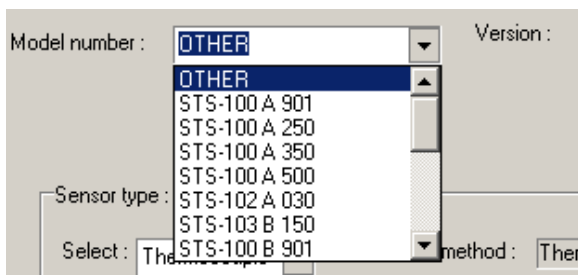

### 3.1.3 Sensor serial number


The serial number which identifies the must be entered in this field.



Serial number : SERIALNO


When saving the Probe data to a file, the serial number is used as the file name therefore certain characters are not permitted within the serial number itself.

Should the user key an illegal character the following warning is displayed.

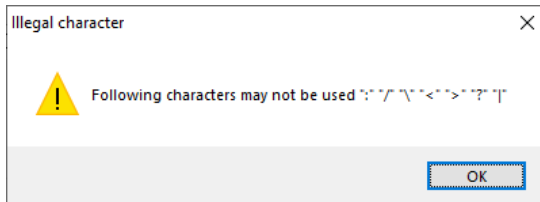

### 3.1.4 Sensor type

There are 3 basic sensor types which are selected from the below drop down list.

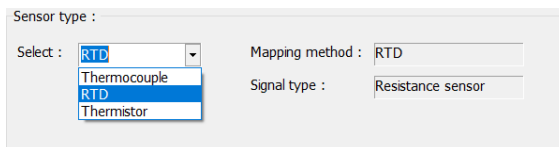

Sensor type :

Select : RTD (dropdown menu open showing Thermocouple, RTD, Thermistor)

Mapping method : RTD

Signal type : Resistance sensor

**Select the sensor type**



## 4. PROBE TYPE DATA

---

In the type data page the user can further define the characteristics of the probes properties. The displayed data depends upon the type of sensor defined in the Identification page (*Rtd, Thermocouple or Thermistor*).

### Probe type data page

**Intelligent probe configuration software**

Probe Identification | **Probe type** | Probe calibration data

**Probe type data**

Temperature range:  
Min : -100 °C      Max : 160 °C

Electrical output:  
Min : 0 Ohm      Max : 8 Ohm

Maximum excitation current : 10,000000E-7 A ( 10,0000E-07 )  
Self heating constant : 1,141040E-03 W/°C ( 1,141040E-03 )

RTD type : CVD

Upload from probe      Save to file      Close communications  
Download to probe      Load from file

## 4.1 Temperature range

The valid range for the temperature parameters are between –273 and 1770 Celsius.

Temperature range:

Min :  °C      Max :  °C

## 4.2 Electrical output

Electrical output

Min :  Ohm      Max :  Ohm

Valid ranges for the electrical output parameters are as follows :

### ***Thermocouple: Volts***

min = -25E-3

max=0.1

### ***Rtd: Ohms***

min = 0 to 2050

max:= 0 to 8200

 
### ***Thermistor: Ohms***

min:=0;

max:=524000;

### 4.3 Selection of the TC type ( TC type only )


Select the type of thermocouple from the list of standard TC sensor types.



Thermocouple type list

### 4.4 CJ compensation ( TC type only )

 
Determines if the probe has automatic CJ compensation or otherwise.



No CJ Req. - Compensation made by Calibrator.  
Built in RTD - Probe with built in RTD/coefficients.  
CJ Required - Compensation required by operator.


### 4.5 Maximum excitation current (RTD & THERMISTOR only)

 Select the type of thermocouple from the list of standard TC sensor types.



### 4.6 Self heating constant (RTD & THERMISTOR only)

 Select the type of thermocouple from the list of standard TC sensor types.



## 4.7 Rtd coefficients ( Rtd only )

Select the type of coefficients stored in the probe. The user can choose between Callendar Van Dusen and ITS-90.

RTD type :  ▼

- CVD
- ITS-90

## 5. PROBE CALIBRATION DATA

In the calibration data page the user define the probe calibration related information.

The displayed data depends upon the type of sensor defined in the Identification page (*Rtd, Thermocouple or Thermistor*).

### Probe type data page

**Intelligent probe configuration software**

Probe Identification    Probe type    **Probe calibration data**

**Probe calibration data**

Calibration date: 16-01-2020

Calibration initials: XEE

Measurement location ID.: 1

Calibration period: 365 Days

Sensor response time: 1,09395E+00 Secs.  
( 1,09395E+00 )

Calculate coefficients from mV/Temp table

**Calibration data - TC**

CJC CVD coefficients

R0: 1,10000000E+03 Ohm    Calc

A: 3,908000000E-03

B: -5,785001000E-07

C: -4,000000000E-12

TC resistance: 1,0000000E+00 ( 1,0000000E+00 )

Correction coefficients

A: 9,558167811E-08

B: 9,999766037E-01

C: -5,961435893E-04

Download to probe    Load from file    Close communications

Upload from probe    Save to file

No ErrorTime Elapsed 313

## 5.1 Calibration details

Set probe calibration date.

Calibration date  ▾

**Calibration date**

Click on the down arrow and an electronic calendar will assist in the date selection.

Calibration date  ▾

Calibration initials

Measurement location ID.

Calibration period :

◀ oktober 2020 ▶

ma	ti	on	to	fr	lø	sø
28	29	30	1	2	3	4
5	6	7	8	9	10	11
12	13	14	15	16	17	18
19	20	21	22	23	24	25
26	27	28	29	30	31	1
2	3	4	5	6	7	8

I dag: 07-10-2020

Calibration initials

**Initials of operator**

Calibration period :  Days

**Calibration period**

## 5.2 Measurement location ID

Measurement location ID. 1

## 5.3 Probe response time

Sensor response time : 1,00000E-06 Secs.  
( 1,00000E-06 )

## 5.4 Probe excitation ( RTD & Thermistor only )

Excitation current : 1,0000000E-06 A  
( 1,0000000E-06 )

## 5.5 Thermocouple coefficients

Calibration data - TC

CJC CVD coefficients

R0 :  Ohm

A

B

C

TC resistance :

( 4,880461E+02 )

Correction coefficients

A

B

C

### Calendar van dusen

The Calc button  is used to calculate the CJ R0 value. The user will be prompted to key in the current temperature reading of the probe

**Calculate CJ R0**

Enter the probe temperature

°C

Enter the reading on the device then click OK.



## 5.6 RTD coefficients

There are two possible coefficient standard available, Calendar van dusen and ITS-90

Calibration data RTD - CVD

R0	<input type="text" value="0,000000E-01"/>
A	<input type="text" value="0,0000000000E-01"/>
B	<input type="text" value="0,0000000000E-01"/>
C	<input type="text" value="0,0000000000E-01"/>

### Calendar van dusen

Calibration data RTD - ITS90

RTPW	<input type="text" value="0,000000"/>
A(LR)	<input type="text" value="0,0000000000E-01"/>
B(LR)	<input type="text" value="0,0000000000E-01"/>
C(LR)/C1(LR)	<input type="text" value="0,0000000000E-01"/>
C2(LR)	<input type="text" value="0,0000000000E-01"/>
C3(LR)	<input type="text" value="0,0000000000E-01"/>
C4(LR)	<input type="text" value="0,0000000000E-01"/>
C5(LR)	<input type="text" value="0,0000000000E-01"/>
A(HR)	<input type="text" value="0,0000000000E-01"/>
B(HR)	<input type="text" value="0,0000000000E-01"/>
C(HR)	<input type="text" value="0,0000000000E-01"/>
D(HR)	<input type="text" value="0,0000000000E-01"/>
W(HR)	<input type="text" value="0,0000000000E-01"/>

### ITS-90

## 5.7 Thermistor coefficients

For thermistor type sensor Steinhart-Hart coefficients are used.

Calibration data - Thermistor

 
Steinhart-Hart coefficients

R0	<input type="text" value="0,0000E-01"/>
A	<input type="text" value="0,0000000000E-01"/>
B	<input type="text" value="0,0000000000E-01"/>
C	<input type="text" value="0,0000000000E-01"/>

**Steinhart-Hart**



## 5.8 Coefficients calculation


Con050 software can be used to calculate coefficients based on table of **Ohm/Temp (RTD)** or **mV/Temp (Thermocouple)** values depending on the type of sensor.

Select the calculation button  to display the temperature table and enter the values used for the Coefficients calculation.

### 5.8.1 RTD sensors.

  For Resistance type sensor it is possible to calculate both Callendar-Van Dusen (IEC-751) and ITS-90 coefficients.

Temperature/ohm values are entered into the displayed table with a maximum of 10 rows. Use the  &  buttons to regulate the number of rows.

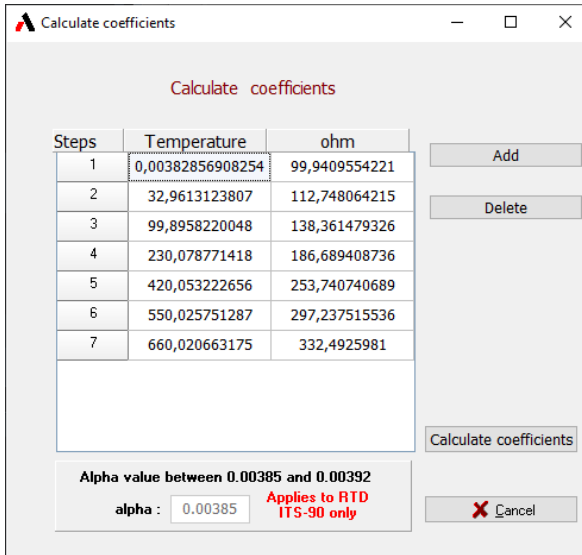

Calculate coefficients

Steps	Temperature	ohm
1	0,00382856908254	99,9409554221
2	32,9613123807	112,748064215
3	99,8958220048	138,361479326
4	230,078771418	186,689408736
5	420,053222656	253,740740689
6	550,025751287	297,237515536
7	660,020663175	332,4925981

Alpha value between 0.00385 and 0.00392  
alpha :  Applies to RTD  
ITS-90 only

Note! Alpha value field is inactive and only applicable to ITS-90

When all values are entered select the **Calculate coefficients** to calculate the coefficients. The program returns to the main screen displaying the new coefficients.

**Intelligent probe configuration software**

Probe Identification    Probe type    Probe calibration data

**Probe calibration data**

Calibration date: 08-05-2009

Calibration initials: X

Measurement location ID: 0

Calibration period: 365 Days

Sensor response time: 1,00000E-01 Secs.  
( 1,03159E-01 )

Excitation current: 2,500000E-03 A  
( 2,503301E-03 )

Calibration data RTD - CVD

R0	9,99418917E+01
A	3,905288783E-03
B	-5,753343678E-07
C	-4,183000000E-12

Calculate coefficients from Ohm/Temp table

Download to probe    Load from file    Close communications  
Upload from probe    Save to file

Results – Cvd

**Intelligent probe configuration software**

Probe Identification    Probe type    Probe calibration data

**Probe calibration data**

Calibration date: 08-05-2009

Calibration initials: X

Measurement location ID: 0

Calibration period: 365 Days

Sensor response time: 1,00000E-01 Secs.  
( 1,03159E-01 )

Excitation current: 2,500000E-03 A  
( 2,503301E-03 )

Calibration data RTD - ITS90

RTPW	9,99413656E+01
A(LR)	0,0000000E+00
B(LR)	0,0000000E+00
C(LR)/C1(LR)	0
C2(LR)	0
C3(LR)	0
C4(LR)	0
C5(LR)	0,0000000E+00
A(HR)	-2,06591370E-02
B(HR)	-9,39593376E-05
C(HR)	2,75632663E-05
D(HR)	0,0000000E+00
W(HR)	0,0000000E+00

Calculate coefficients from Ohm/Temp table

Download to probe    Load from file    Close communications  
Upload from probe    Save to file


Results – ITS-90

Saving to the probe file will also preserve the Temp/Ohm values and are available next time the probe is loaded again.


## 5.8.2 Thermocouple sensors.

It is also possible to calculate coefficients for certain Thermocouple types by entering the temperature / microvolt ( $\mu\text{V}$ ) values in the table.

Not all Thermocouple type are implemented. Con050 will display a warning should a user try to calculate coefficients for a type not yet implemented.

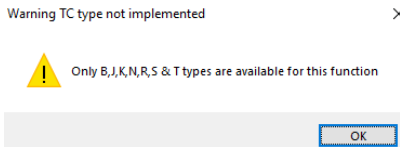

Temperature/ microvolt values are entered into the displayed table with a maximum of 10 rows. Use the **Add** & **Delete** buttons to regulate the number of rows.

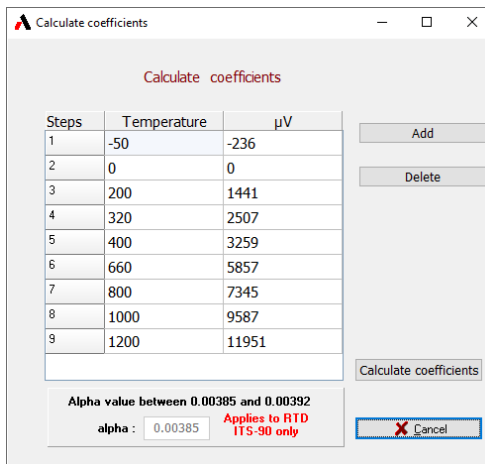

When all values are entered select the **Calculate coefficients** to calculate the coefficients. The program returns to the main screen displaying the new coefficients.

**Probe calibration data**

Calibration date	<input type="text" value="16-01-2020"/>		
Calibration initials	<input type="text" value="XEE"/>		
Measurement location ID.	<input type="text" value="1"/>		
Calibration period :	<input type="text" value="365"/> Days		
Sensor response time :	<input type="text" value="1,09395E+00"/> Secs. ( 1,09395E+00 )		

Calculate coefficients from mV/Temp table

Calibration data - TC

CJC CVD coefficients

RO :  Ohm

A

B

C

TC resistance :

( 1,0000000E+00 )

Correction coefficients

A

B

C

Saving to the probe file will also preserve the Temp/Microvolt values and are available next time the probe is loaded again.



[www.ametekcalibration.com](http://www.ametekcalibration.com)

**UK**

Tel +44 (0)1243 833 302  
stc.uk@ametek.com

**France**

Tel +33 (0)1 30 68 89 40  
general.lloyd-instruments@ametek.fr

**Germany**

Tel +49 (0)2159 9136 510  
info.mct-de@ametek.de

**Denmark**

Tel +45 4816 8000  
jofra@ametek.com

**USA - California**

Tel +1 (800) 444 1850  
crystal@ametek.com

**USA - Florida**

Tel +1 (800) 527 9999  
cal.info@ametek.com

**India**

Tel +91 22 2836 4750  
jofra@ametek.com

**Singapore**

Tel +65 6484 2388  
jofra@ametek.com

**China - Shanghai**

Tel +86 21 5868 5111  
stc.china@ametek.com

**China - Beijing**

Tel +86 10 8526 2111 ext. 19  
stc.china@ametek.com