RTCt FIRMWARE UPDATE PROCEDURE

To perform a firmware update of the RTCt -temperature calibrator, a USB-memory stick with the new firmware is needed. It is recommended to use a memory stick/card with a maximum capacity of 64 GB or less.

IMPORTANT:

1. Upload all workorders to JofraCal and read all Auto Step and Switch Test results prior to updating the firmware.
2. The calibration of the RTCt temperature calibrator will not be affected by the firmware update.
3. User settings may be affected by the update
4. The file with the new firmware (e.g. JofraXTCt.1.0.501.swu) has to be located in the root of the memory stick and the memory stick must not contain any other .swu files.

Turn on the calibrator and wait for the main screen to appear.

Insert the USB memory stick to any vacant USB port at the right side of the calibrator. A popup dialog will ask for confirmation to upgrade to the new firmware version.

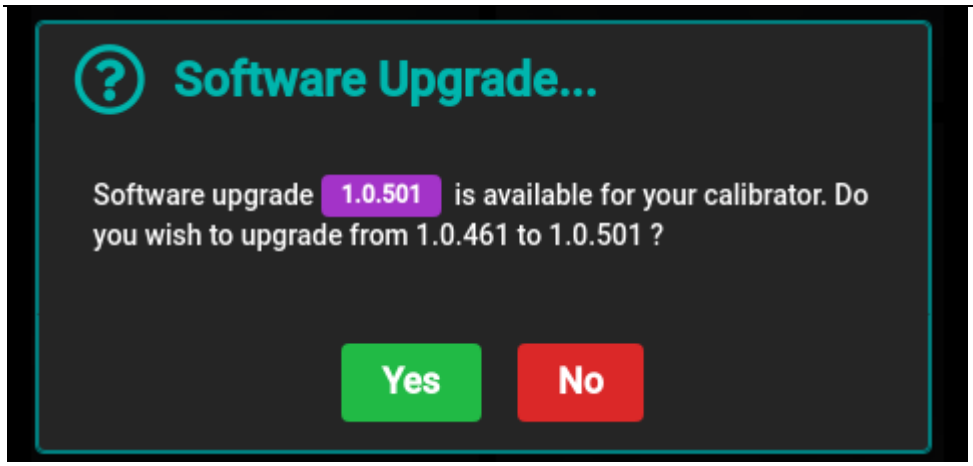

Press “Yes” to start the update. Do not turn off power while update is in progress.

The calibrator will prompt the user to restart the calibrator when the firmware installation is completed after approximately 5 minutes.

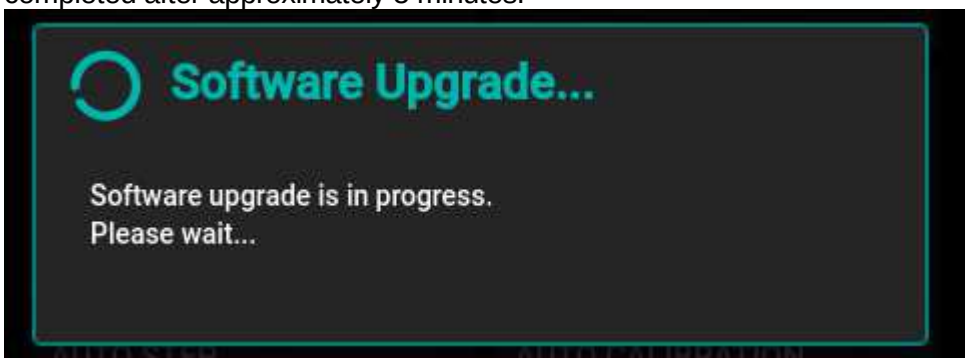

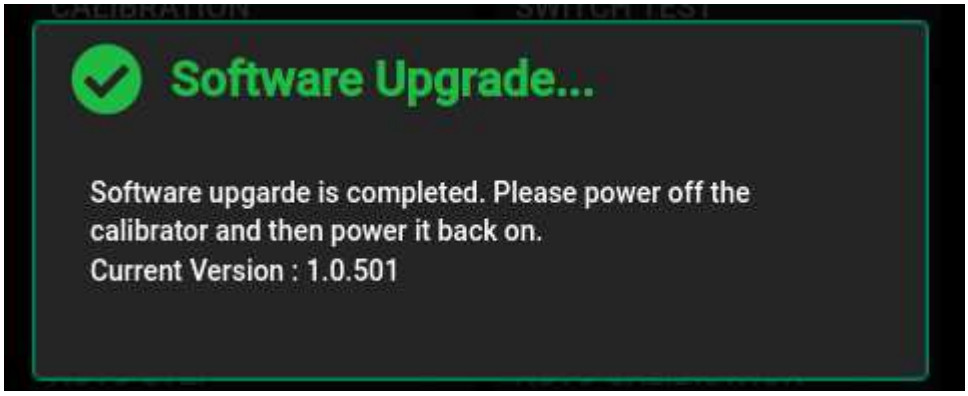

The memory stick can be removed after the calibrator has restarted.

To confirm the new firmware version, consult the About screen. Press the menu icon and “About / Status”

.

The firmware version is displayed next to “Version:”